Lesson 5: WX Weather - Station Page

This document will introduce the user to the WX Weather Station Page, and the associated functions of the Station Page.

Log into WX Weather





Log into WX Weather as a Guest or with User Authentication.

Using the left menu, click on "Stations" and then in the drop down menu click on "Station Search".

Certain functions on the Station Page may or may not be available for all users, depending on the user's role.


All functions on the station page will be visible, however some buttons and links my be dimmed or greyed out if the user role does not permit access to those functions.

The example to the left displays dimmed buttons because the user is logged in as a guest.

To review user roles, visit:

https://raws.nifc.gov/wfmi-weather-user-rolesand-tasks



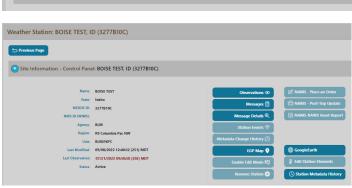


The Station Page will display the following information:

- Site Information Control Panel
- General Location Site Owners and Maintenance Information
- System Transmit Information

Each section of the Station page is divided into 2 columns of information.


The individual sections can be collapsed or expanded using the blue arrow buttons.

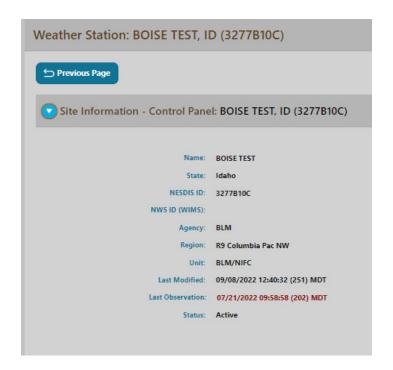

SITE INFORMATION - Control Panel

The left column of the Site Information – Control Panel lists the following station information:

- Name the station name
- State the state in which the station is located
- NESDIS ID the station's assigned
 NESDIS ID (National Environmental
 Satellite, Data, and Information Service)
- NWS ID (WIMS) the WIMS ID number if one has been assigned – not all stations are assigned a WIMS ID
- Agency the agency which the station belongs to
- Unit the unit which the station is assigned to
- Last Modified The last time the station information was modified in WX Weather
- Last Observation the last time the station transmitted data
- Status the station status Active/Deactive/Removed

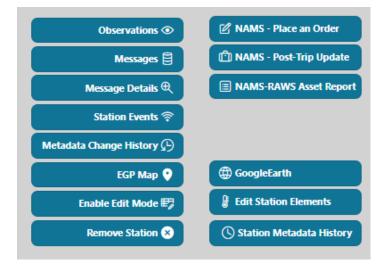

SITE INFORMATION - Control Panel


The right column contains button links to various functions. Not all functions will be available for all users.

- Observations lists station data
- Messages lists raw data from the station
- Message Details lists the most recent data transmission in raw format, including the header, message, elements, and station events report
- Station Events lists all adverse events regarding data transmissions
- Metadata Change History lists all changes made to the station metadata such as changes to station location, station name, changes to station elements



SITE INFORMATION – Control Panel – continued...

- EGP Map displays station location on the NWCG.gov (National Fire Situational Awareness) website
- Enable Edit mode enables edit functions to alter/change station metadata
- Remove Station Reserved use for RAWS Depot technicians and management
- NAMS Place an Order used to generate parts orders for station maintenance or replacement parts
- NAMS Post Trip Update used to annotate information about station maintenance, directions to the station, and displays historical notes about the station
- NAMS RAWS Asset Report generates a data file – emailed to the user about station assets, and other information
- GoogleEarth used to generate KMZ file to be used with Google Earth to display station location
- Edit Station Elements used to edit station sensors which appear in the Observations and Messages weather data page
- Station Metadata History used to review station metadata changes

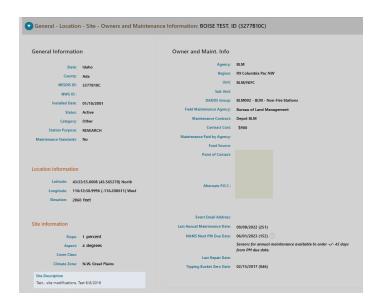

General – Location – Site – Owners and Maintenance Information

This section displays site specific information about the RAWS weather station

- General Information
- Location Information
- Site Information
- Owner and Maintenance Information

General Information State: Idaho County: Ada NESDIS ID: 3277B10C NWS ID: Installed Date: 01/10/2001 Status: Active Category: Other Station Purpose: RESEARCH Maintenance Standards: No

General Information

This section displays the following information:

- State state where the station is located
- County county where the station is located
- NESDIS ID the station NESDIS ID
- NWS ID the station NWS ID or WIMS ID
- Installed Date date which the station was deployed or installed on site
- Status station status ACTIVE/DEACTIVE/REMOVED
- Category the station category type
- Station Purpose the purpose for which the station is primarily used
- Maintenance Standards YES/NO the status of whether or not the station meets NFDRS fire standards

Location Information

Latitude: 43:33:55.0008 (43.565278) North

Longitude: 116:12:30.9996 (-116.208611) West

Elevation: 2860 feet

Location Information – lists the station's physical location

- Station location latitude, longitude, elevation
- Lat/Long given in degrees, minutes, seconds
- Elevation is displayed in feet





Site Information – displays information about the physical location of the site

- Slope, Aspect, Cover Class, Climate Zone
- Site Description physical characteristics of the area where the station is located

Owner and Maintenance Information

- Agency the agency which owns the station (BLM, NWS, USFS, etc...)
- Region the service region in which the station is part of
- Unit the unit which the station belongs to or operates under
- Sub Unit the sub unit which the station belongs to or operates under
- DADDS Group DCS and Data Distribution
 System assigned group of which the station belongs to
- Field Maintenance Agency the entity which performs maintenance on the station
- Maintenance Contract the type of maintenance contract associated with servicing the station
- Contract Cost annual cost of the service contract
- Maintenance Paid by Agency the agency which pays for station maintenance
- Fund Source source of funding for the station contract or servicing
- POC Point of Contact the primary contact for the station
- Alt POC the alternate contact for the station, can be multiple persons
- Event Email Address lists all persons who receive event emails for the station, can be multiple contacts who are or are not the POC and Alt POC
- Last Annual Maintenance Date the date which last annual maintenance was completed on the station
- NAMS Next PM Due Date the date on which the next annual maintenance is to be performed
- Last Repair Date the last date on which repairs to the station were completed
- Tipping Bucket Zero Date the date on which the datalogger will zero the rain count (annually)